VER10620107370

STEREO RADIO

CRC 7370

USER MANUAL

CREATE MORE XITEMENT

Imprint

All rights reserved. Any reproduction without consent of cmx® is prohibited.

cmx® reserves the right to modifications of the device.

Designed by cmx® in Europe | Assembled in China

TM©2010 cmx electronics

CONTEXTS

1. GENERAL ..... - 1 -

1.1. Safety precautions ..... - 1 -
1.2. Disposal of Waste Electronic Equipment ..... - 1 -
1.3. Battery Disposal ..... - 2 -
1.4. Copyright ..... - 2 -
1.5. Hearing Protection ..... - 2 -
1.6. Cleaning and Maintenance ..... - 3 -

2. FEATURES ..... - 4 -

3. LOCATION OF CONTROLS ..... - 5 -

3.1. Main unit ..... - 5 -
3.2. Remote control ..... - 7 -

4. PREPARATION ..... - 7 -

4.1. Connection with cable ..... - 7 -
4.2. Operation with batteries ..... - 8 -

5. CD-PLAYER ..... - 8 -

5.1. Insert CD / MP3-CD ..... - 8 -
5.2. CD / MP3-CD playback ..... - 8 -
5.3. Program CD / MP3 tracks ..... - 9 -

6. RADIO ..... - 10 -

6.1. Listen to radio ..... - 10 -

7. EXTERNAL COMPONENTS ..... - 10 -

7.1. Connect earphones ..... - 10 -
7.2. USB 2.0 / SD ..... - 11 -

8. TROUBLESHOOTING ..... - 12 -

9. WARRANTY ..... - 13 -

9.1. Warranty Procedure ..... - 13 -
9.2. Warranty has expired ..... - 14 -
9.3. Shipping the Unit ..... - 14 -

10. IN THE BOX ..... - 18 -

11. TECHNICAL SPECIFICATIONS ..... - 19 -

1. General

1.1. Safety precautions

- ⚠ Only connect to mains power supply (230 Volt/50 Hz).
- ⚠ Do not place the device in close proximity of water (e.g. sink, wash basin, etc.). The device can fall into the water and cause a short circuit.
- ⚠ The device consumes some power during standby operation. For zero power consumption disconnect from mains power supply.
- ⚠ Place the device on a stable surface to prevent it from tipping over and causing damages or injuries.
- ⚠ Condensation can form if the device is placed in cold surroundings. Leave the device for at least one hour in standby mode.
- ⚠ Do not subject the device to direct sunlight or high temperatures, this can result in fire.

1.2. Disposal of Waste Electronic Equipment

Your product is manufactured from high quality raw materials and should be recycled.

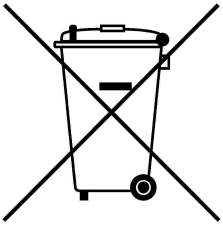

Ask your municipality for collecting points for waste electronic equipment.

Do not dispose of old appliances with the household waste.

The symbol on the product, the instructions for use or the packing will advert about the methods for disposal.

1.3. Battery Disposal

The law requires returning exhausted batteries to public collection points or to the dealer.

Do not dispose of exhausted batteries with the household waste.

1.4. Copyright

It is illegal to copy, send, exhibit, broadcast via cable, publicly show or rent copyrighted materials without consent.

1.5. Hearing Protection

- Select a moderate volume to protect your hearing.

- Only turn the volume to a level where you can still hear ambient noise.

1.6. Cleaning and Maintenance

⚠ Before cleaning disconnect from mains power supply.

- **Cleaning the Casing**

  Clean the casing with a dry cloth.

- **Cleaning CDs**

  Clean CDs with a soft cloth from the center to the edge.

⚠ Do not use pointed or sharp utensils for cleaning, this will damage the CD.

- **Cleaning the Laser**

  Dust or dirt can collect on the laser pick-up. Only use a commercially available special cleaner.

⚠ Do not clean with liquid cleaning agents or a wet cloth, this can cause a short circuit.

2. Features

This stereo radio can play all Audio CDs and MP3 CDs.

Music playback is also possible via USB port and SD card reader.

You can operate the stereo radio with a power cable or batteries.

⚠ Batteries not included in delivery.

3. Location of controls

3.1. Main unit

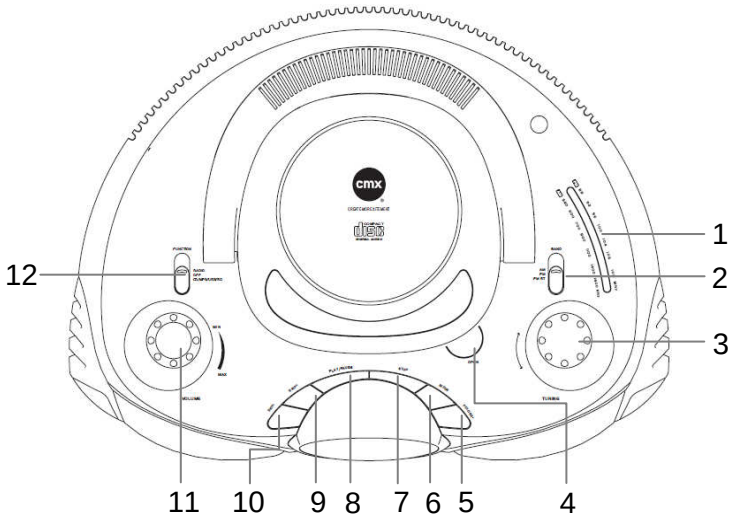

1	TUNING	Frequency scale
2	BAND	Switch to AM/FM/FM ST
3	TUNING	To adjust the frequency
4	OPEN	Open CD drive
5	FOLDER+	10 tracks forward
6	MODE	Stop mode: programming Play mode: set the repetition
7	STOP	Stop playback
8	PLAY/PAUSE	Start and pause playback
9	SKIP+	Fast forward / next track
10	SKIP-	backward / previous track
11	VOLUME	Decrease and increase volume
12	FUNCTION	Function selector Radio, OFF und CD / MP3 / USB / SD

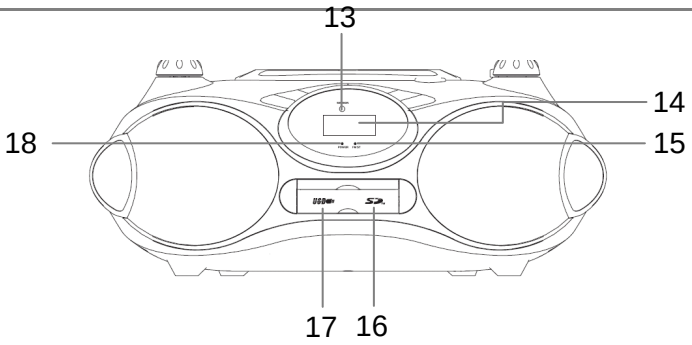

13	SENSOR	Infrared sensor for remote control
14	LCD	display
15	FM STEREO	LED for FM Stereo
16	SD JACK	SD or MMC card slot
17	USB	Port for MP3 player / USB stick
18	SD LED	LED for SD slot

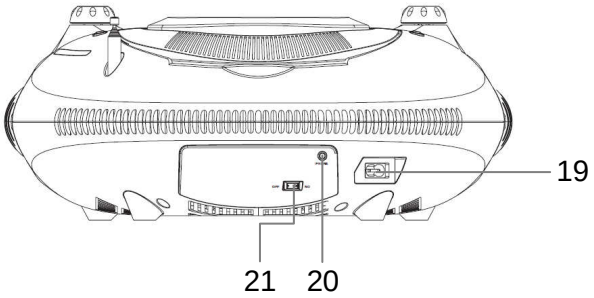

19	AC	230 Volt
20	POWER	On/off switch
21	PHONE	Earphone / headphone jack

3.2. Remote control

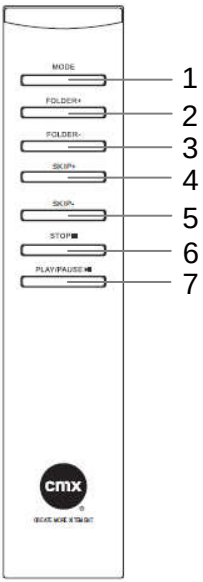

1	MODE	Stop Mode: programming Play mode: set the repetition
2	FOLDER+	10 tracks forward
3	FOLDER-	10 tracks backward
4	SKIP+	Fast forward / next track
5	SKIP-	backward / previous track
6	STOP ■	Stop playback
7	PLAY/PAUSE ▶II	Start and pause playback

4. Preparation

4.1. Connection with cable

Follow this step to connect the system:

1. Connect the mains power cable first tot he system and then to a wall outlet.
2. Turn on the device on the back and select the desired function.

4.2. Operation with batteries

1. Open the battery door and insert 8 batteries (UM-2/C/LR14).

   ⚠ Please observe correct battery polarities.

   ⚠ When the set is not used or is only used with “AC”, please remove the batteries, to avoid damage to set from leakage of batteries.

5. CD-Player

5.1. Insert CD / MP3-CD

1. Press OPEN to open the CD drive.
2. Insert a CD with the label up and carefully press it down onto the ball bearing spindle.
3. Close the CD drive manually.

5.2. CD / MP3-CD playback

1. Set the function switch to MP3/CD.
2. Press PLAY/PAUSE key and the disk will start spinning and than playing the first song (track).

This system can play CDs / MP3 CDs in different playback modes.

1. Press MODE during playback:

During playback from an audio CD, you have the following options:

Settings	Playback
Repeat (press once)	Repeat current track.
Repeat All (press twice)	Repeat all tracks on the CD.

During playback a MP3-CD, you have the following options:

Repeat (press once)	Repeat current track.
Repeat Album (press twice)	All tracks oft he current album are repeated.
Repeat All (press triply)	Repeat all tracks on the CD.

5.3. Program CD / MP3 tracks

You can program your own playlist with up to 99 tracks.

1. During CD / MP3-CD playback press the STOP button before programming.
2. Press MODE until *P01* and *PROGRAM* are displayed.
3. Press SKIP+ or SKIP- until the desired track is displayed.

4. Press MODE to confirm.
5. Repeat step 3 and 4 to program further tracks.
6. Press the PLAY/PAUSE button to start playback.

6. Radio

6.1. Listen to radio

1. Set the function switch to RADIO.
2. Select AM, FM or FM Stereo.
3. Turn the tuning knob to tune into your favorite radio station.

⚠ For best reception point the antenna in a different direction or choose a different location.

7. External components

7.1. Connect earphones

1. Connect your earphones or headphones.

   The speakers are muted if earphones are connected.

⚠ To avoid hearing problems do not use earphones or headphones for an extended period of time.

⚠ Increased sound pressure from earphones or headphones can cause hearing loss.

7.2. USB 2.0 / SD

Extend your system by connection your MP3 player, USB stick or SD and MMC card.

⚠ The media should not exceed 2 GB of memory

⚠ Do not disconnect the device when „USB“ or „SD“ mode is selected.

1. Connect your MP3 player, USB stick or SD / MMC card.
2. Set the function switch to CD/MP3/USB/SD.

⚠ If there is no CD in the CD tray, then go to point 3.
If there is a CD in the CD tray, then press **PLAY/PAUSE** and **STOP** simultaneously to switch to USB /SD.

3. Press PLAY/PAUSE to start playback.

⚠ To avoid damage only disconnect the device after pressing the STOP button and selecting a different mode with the function selector.

8. Troubleshooting

Contact the service hotline or use the contact form on the homepage in case of problems with the system that are not dealt with here.

Malfunction	Solution
„No disc“	▪ Insert a CD. ▪ Insert a finalized CD-RW or CD-R. ▪ Insert a CD with the label up. ▪ Try another CD or clean the CD.
Bad reception	▪ Increase the distance to TV set or DVD player. ▪ Point the antenna in a different direction.
System does not respond.	▪ Disconnect from mains power supply and reconnect after a few seconds.
No sound	▪ Increase the volume. ▪ Disconnect the earphones.
No CD playback	▪ Check your CD for damages or scratches. ▪ Insert the CD with the label up.

USB stick / SD memory card does not work	▪ Use a different USB stick or SD card to check the function.

9. Warranty

This system comes with a 24-month warranty from the date of purchase.

Please keep your purchase documents!

In case of manufacturing or material defects the warranty consists of rectification of defects or exchange.

The warranty does not include damages or troubles in case of

- malfunctions due to improper use
- wear and tear
- repairs by third parties

The warranty does not include

- display damage
- accidental damage

Repair does not extend the warranty period.

9.1. Warranty Procedure

In case of malfunctions, please contact:

- Your dealer
- Service hotline
    - Austria: +43 0720 502671 – please dial with the zero!
    - Germany: +49 (0)180 166 66 264 621
    - Switzerland: +41 (0) 848 00 3322
- Contact form – www.cmx-electronics.com

9.2. Warranty has expired

Please contact us by phone or contact form in case your warranty has expired. We will help you!

Please inform us about the following:

- Unit type
- Purchase date
- Malfunction

9.3. Shipping the Unit

To ensure a quick response, please observe the following in case you send us the unit:

- Send unit plus accessories
- Send postage free to service center

- Attach purchase documents
- Attach filled-out warranty card
- Error description

Example for error description

Wrong	**Correct**
Unit is defective	Unit does not respond
Unit malfunctions	Unit cannot be switched on

- Sender information: Name, address, ZIP code, city and phone number and e-mail address

Cut out the warranty card.

CREATE MORE XITEMENT

2 Jahre Garantie auf Gerät

Die Garantie ist nur gültig bei gleichzeitiger Vorlage von Rechnung und Garantiekarte.

Der Garantieanspruch erlischt unter folgenden Bedingungen:

- Ändern oder entfernen der Seriennummer,
- Änderung oder Verlust der Garantiekarte,
- Kauf bei nicht autorisiertem Händler.

Bei falscher Anwendung, Missbrauch oder versehentlicher Beschädigung des Gerätes, erlischt der Garantieanspruch. Dazu zählen:

- Fehlfunktion, die durch das Gerät nicht geeignete Versorgungs-/Betriebsspannung verursacht wurden,
- Mechanische Beschädigung,
- Durchgeschnittene Kopfhörerkabel.

Die Vertragsbedingungen können ohne vorheriger Benachrichtigung geändert werden.

2 years guarantee period for product

Guarantee is valid only when dealer's invoice is presented together with this guarantee card.

Guarantee does not cover under the following conditions:

- Serial number has been altered or removed,
- Guarantee card is lost or amended,
- Purchase at unauthorized dealer.

Guarantee will be treated as void if product being misused incorrectly used or damaged accidentally, including:

- Malfunction caused by irregular voltage supply,
- Mechanical damage,
- Cut earphone cables.

Terms subjected to change without previous notice.

Zentrale: Darius HandelsgmbH · Konstanziagasse 31-35 · 1220 Wien · Austria · sales@darius.at

cnx
CREATE MORE XITEMENT
GARANTIEKARTE GUARANTEE CARD
Produkt
Product
Seriennummer
Serial number
Händlername
Dealer's name
Kaufdatum
Date purchased
Darius Servicecenter · Strohbogasse 4 · 1210 Vienna ·
Austria | Service MO - DO 8.00 - 16.00 · FR 8.00 - 12.00 · |
Hotline Austria +43 0720 50 26 71 (Inlandstarif – Null mit wählen) |
Hotline Germany +49 (0) 180 166 66 264 621 |
Hotline Switzerland + 41 (0) 848 00 33 22
Zentrale: Darius Handelsgmbh · Konstanziagasse 31-35 · 1220 Wien · Austria · sales@darius.at

10. In the box

Please contact your dealer directly in case one of the accessories is missing or damaged.

Power cable

User manual

11. Technical specifications

CD-Player	
Formats	Audio-CD / Audio-CD-R / Audio-CD-RW MP3-CD / MP3-CD-R / MP3-CD-RW
Radio	
Frequency bands	AM / FM / FM Stereo
frequencies	AM 540 – 1600 kHz FM 88 – 108 MHz
Connectors	
Inputs	USB 2.0 – 1.1 compatible
Outputs	3,5 mm headphones
Card reader	SD card MMC card
Speakers	
Power output	maximal 25 Watt PMPO
General	
Power consumption	15 Watt
Mains power	AC 230 V ~ 50 Hz
Dimension	352 x 148 x 262 mm

CREATE MORE XITEMENT

www.cmx-electronics.com